



Series 65 Mounting Base
Part No. 45681-200

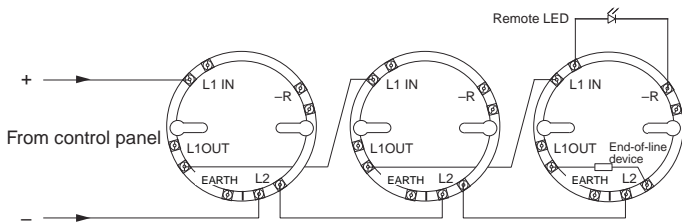

Wiring diagram of monitored Series 65 zone

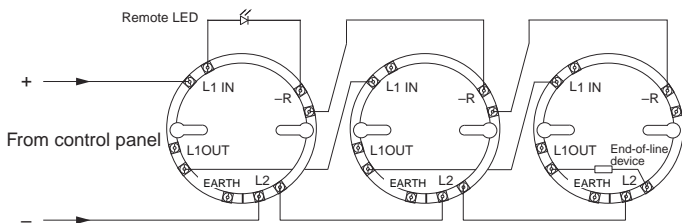

Wiring diagram of monitored Series 65 zone with common remote indicator

*Note: L1 must be connected to positive line if a remote indicator is connected.
An 'EARTH' terminal is provided for zone wiring continuity.*