Series 65 Mounting Base
Part No. 45681-200

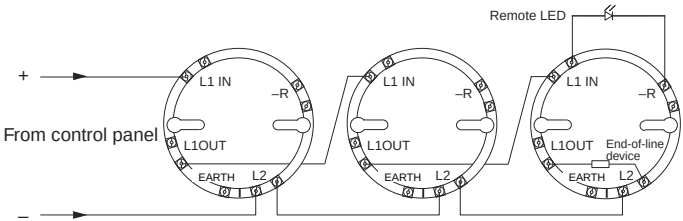

Wiring diagram of monitored Series 65 zone

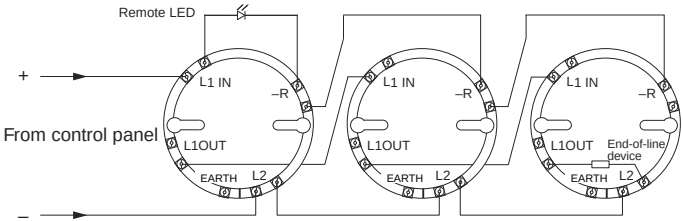

Wiring diagram of monitored Series 65 zone with common remote indicator

Note: L1 must be connected to positive line if a remote indicator is connected. An 'EARTH' terminal is provided for zone wiring continuity.

© Copyright Apollo Fire Detectors Limited 2012
Apollo Fire Detectors Limited, 36 Brookside Road, Havant, Hants, PO9 1JR, UK
Tel +44 (0)23 9249 2412 Fax +44 (0)23 9249 2754
Email: techsales@apollo-fire.co.uk Website: www.apollo-fire.co.uk